

## SPARE PARTS AND ACCESSORIES FOR IPS/1-2 AND IPT

### CONNECTING BRACKET FOR ALBACUT

#### IPT 1

 
Torch model	Bracket set code
ALBACUT	39IP013

#### IPT 2

Torch model	Bracket code
ALBACUT	39IP015
ALBACUT TFT	D15450554P01

## RICAMBI E ACCESSORI PER IPS/1-2 E IPT

### STAFFE DI COLLEGAMENTO PER ALBACUT




### IRON POWDER PIPE FOR ALBACUT

#### IPT 1

Torch model	Code	
	850	D1932006P01
	1000	D1932006P02
ALBACUT	1100	D1932006P03
	1200	D1932006P04
	1400	D1932006P05

 
### TUBO POLVERE FERRO PER ALBACUT



### SUPPORT FOR IRON POWDER PIPE

#### IPT 2

 Torch model	Code
ALBACUT	39IP050

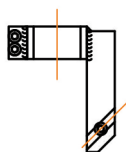


### INJECTOR FOR IPS/2

#### IPS/2

Code
39IP035
 
### INIETTORE PER IPS/2



### MAGNET FOR IPS/2

#### IPS/2

Code
39IP026

### MAGNETE PER IPS/2

